

Variable ISI
Channel

CLE1000

**Hardware Operation Manual
for
CLE1000-H1
CLE1000-S1
CLE1000-A2**

Rev 2.2

January 2014

Introduction	2
Safety Instruction	2
1. General.....	4
Features	4
2. Connectors & Switches	5
2-1 Panel Switches and Connectors.....	5
2-2 Wiring.....	7
3. Operations	8
3-1 Stand Alone Operation	8
3-2 Remote Operation	8
3-3 Tips for Local mode & Remote mode	9
3-4 Additional Notes	9
4. Specifications	10
Insertion Loss & Return Loss.....	11
5. Warranties	14

Introduction

Thank you very much for purchasing our product. This manual contains the procedures to be followed to operate the product, the checkpoints and precautions to be observed, and so on. Improper handling may result in malfunction. Before using this product, please read through these instructions to ensure that you will operate this product correctly. After reading through the manual, keep it in a safe place for future reference.

Safety Instruction



Warning

In order to avoid improper handling that may result in a safety hazard, please be sure to read this manual thoroughly before using this product to learn the proper method of operation.

Do not use this product where there is a danger of ignition or explosions.

This product is for indoor use ONLY.

Static electricity gives critical damage to the product. Do not short static electricity to signal line and ground line.

Do not connect GND to voltage supply.

Do not remove the cover.

In the unlikely event that trouble or malfunction should occur, disconnect this product's power cable, and contact your dealer or an ARTEK sales representative.

This product contains some high-voltage parts. If you touch them, you may receive an electronic shock and burn yourself, so do not attempt to disassemble, repair, or remodel this product.

Do not spill liquid or drop inflammable objects or metal parts into it. Usage under such conditions may result in fire, electrical shock, or malfunction.

All copyright pertaining to this manual are the property of Artek, Inc.

This manual may not be copied in whole or in part without written permission.

The contents of this manual are subject to change without prior notice due to improvements.

The manufacture will not be liable for any damage or trouble caused by the faulty connection or operation of this product.

Accessories

AC power cord (1)

USB control cord (1)

2.92mm (K) Connector adapter (4) – attached to the main unit of CLE1000-H1, CLE1000-S1

Operation Manual (1)

Control Software Operation Manual (1)

Control Software CD (1)

Fuse (1) – stored in the inlet holder at the AC inlet

1. General

CLE1000 is a variable ISI channel, consisted of passive differential lines, engineered for PHY testing on serial data interfaces. The patent-pending technology allows the linear adjustment from 0% to 100%.


Features


- Linearly Variable: Variable Insertion Loss from 0% to 100%
- Fully Passive: Passive Differential Transmission Line
- DC Coupled: No Low Frequency Limit
- Remote Control via USB: enables automated calibration

2. Connectors & Switches

This section explains how you connect wires and start up for both stand-alone mode as well as remote control mode.

2-1 Panel Switches and Connectors

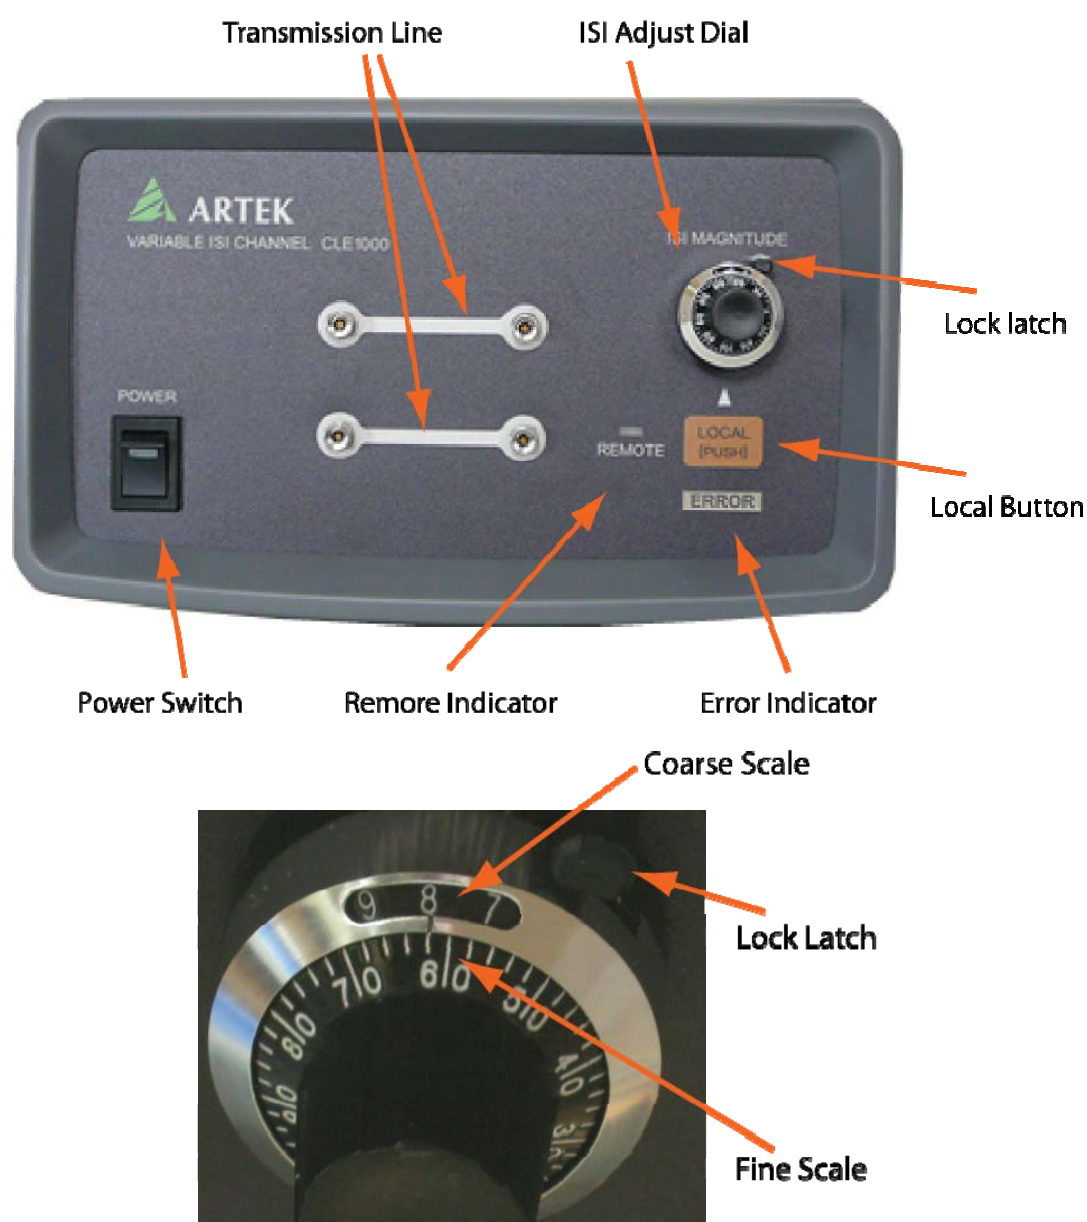

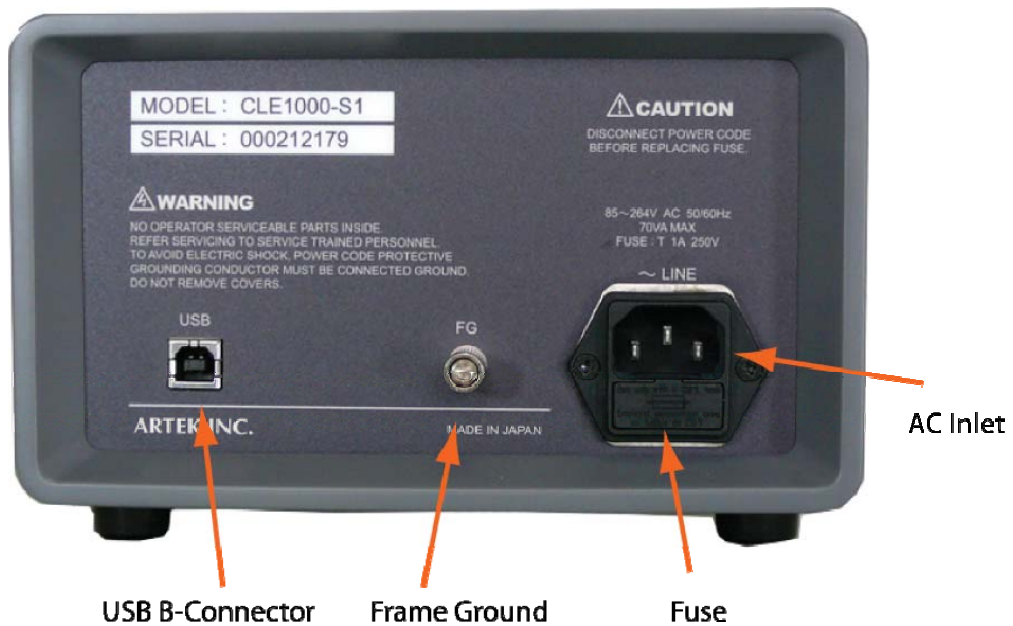

2-2 Wiring

Wiring for Stand Alone

- Make sure coaxial connectors are not connected
- Connect an earth code at the rear. Also connect the ground with the other equipment first.
- Connect a power code at the rear
- Turn the switch on the front ON
- Connect transmission cables at the front
- Fasten the connector with torque of 0.9Nm

This unit does not require power for static usage.
Power is only required when changing the value.

Wiring for Remote Control

- Follow the Stand-Alone wiring
- Connect USB cable at the rear
- Start remote control from your controller


Pressing the Local Button resets to Local operation mode.

3. Operations

This section explains how to operate this product in both Stand-alone mode and Remote mode.

3-1 Stand Alone Operation

- Make sure the unit is in “Local Mode”. Pressing the “Local Button” on the front panel resets the unit to Local Mode.
- The amount of ISI (Insertion Loss) is adjusted by the volume dial on the front panel.

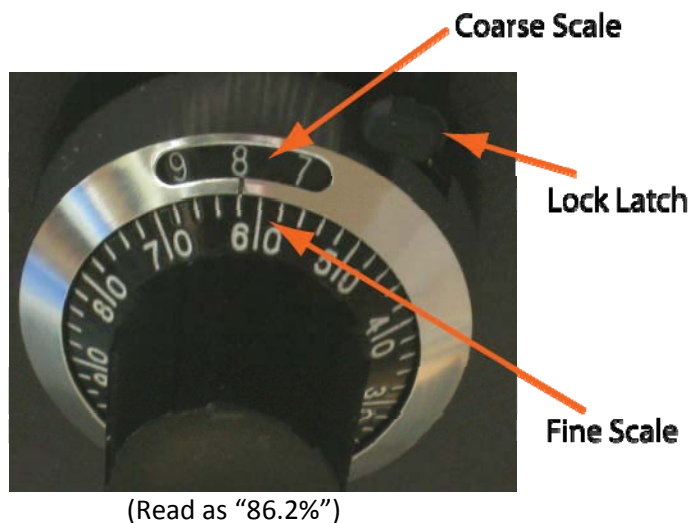

- Rotating the dial changes the Fine Scale
- One round for fine scale change one step at Coarse scale
- Lock Latch is to lock the dial

3-2 Remote Operation

Refer to the Remote Control Manual for details.

3-3 Tips for Local mode & Remote mode

- “Local button” on the front panel is to switch the control mode from remote mode to local mode. The switching is done upon completion of currently working remote control.
- “Remote indicator” on the front panel indicates the remote mode. When flushing, the dial on the front panel does not reflect the ISI amount no matter which value it specifies. However, once Local button is pressed, the value at the dial is applied immediately.

3-4 Additional Notes



- The frame ground has the same voltage level with AC inlet ground. Connect the frame ground with other equipment’s ground, then turn on the power.
- Do not use this equipment under condensed environment.
- Release the static electricity inside of this equipment by connecting the coaxial connectors with ground.
- Avoid continuous operation more than 100 times for whole range (0% ~ 100%) change.
- Place the equipment on the flat surface to secure the result.
- The transmission delay varies by the insertion loss amount.
- The differential line should be used for the same directional two lines.
- Do not remove the 2.92mm (K) connector adapter or SMA connector adapter except when exchanging the adapter itself.
- Fasten the connector with torque of 0.9Nm , do not exceed 0.9Nm.

4. Specifications



Transmission Line	2x DC-coupled Single End
Impedance	50 ohm
Connector	(H1/S1) 4x 2.92mm(K) Female (A2) 4x SMA
Input Tolerance	10Vpp Max
Delay	(H1) 1.65ns +/- 40ps approx. (S1) 2.2ns +/- 200ps approx. (A2) 3.8ns +/- 600ps approx.
Remote Control	USB 2.0
Power	AC 85V ~ 264V 50Hz/60Hz 70VA max Fuse(T type 1A 250V pi3x20)
Dimensions	190(w) x 110(h) x 440(d) mm
Operation Environment	25+/- 5 C, <65%RH

Insertion Loss & Return Loss (Typical Example)



CLE1000-A2 (Typical measurement example)

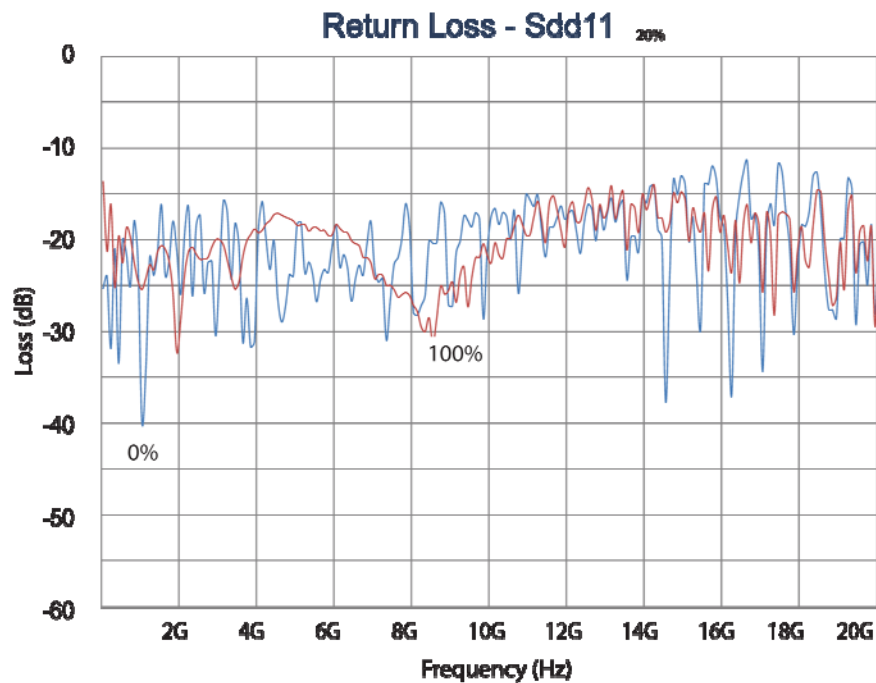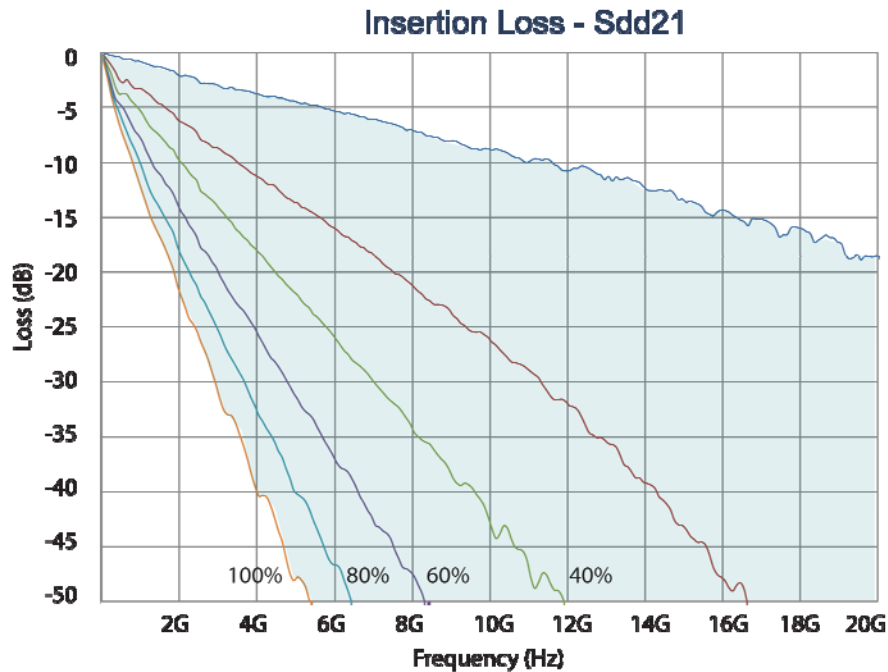

CLE1000-S1 (Typical measurement example)

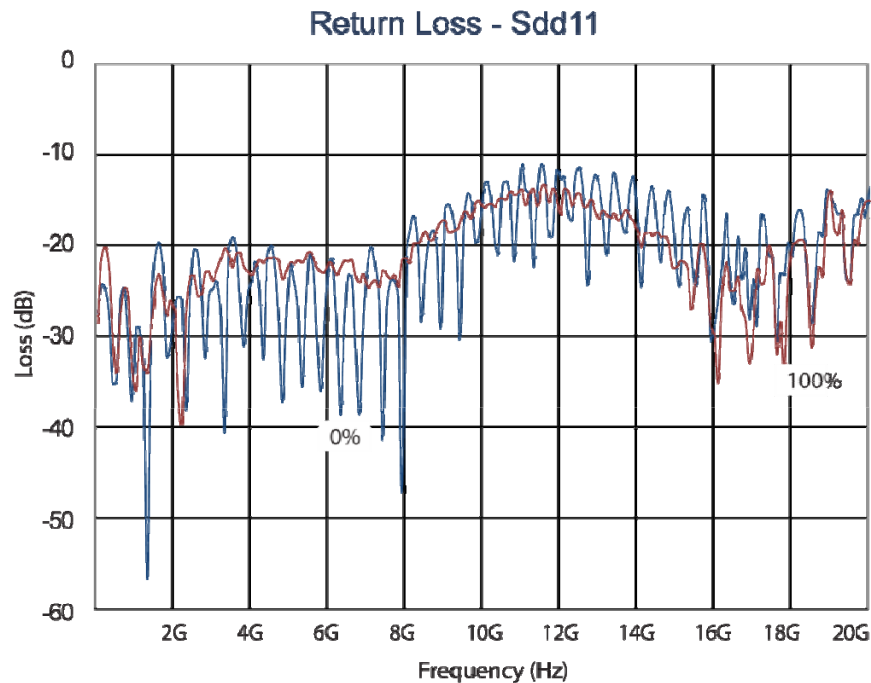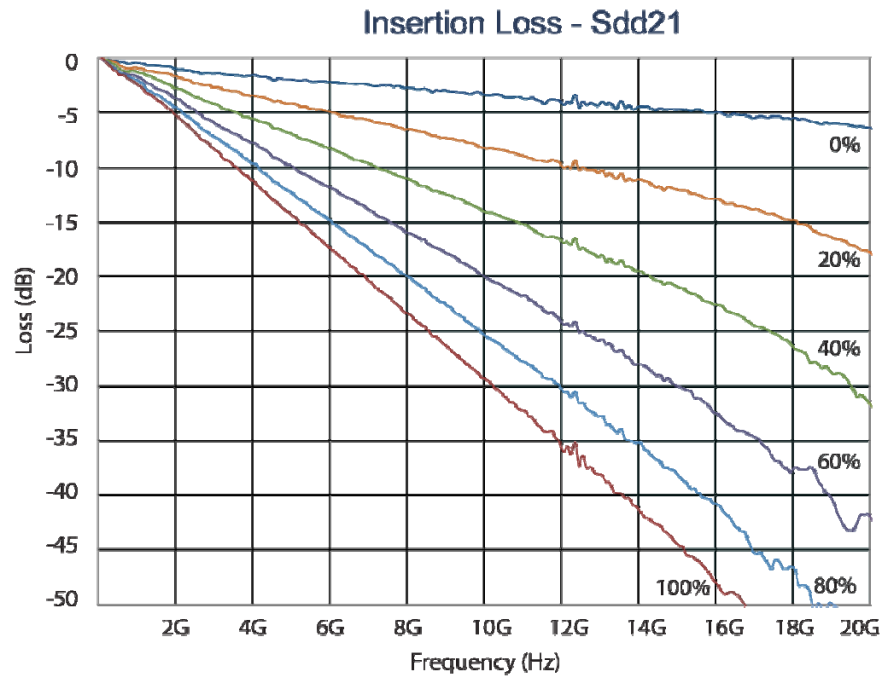

CLE1000-H1 (Typical measurement example)

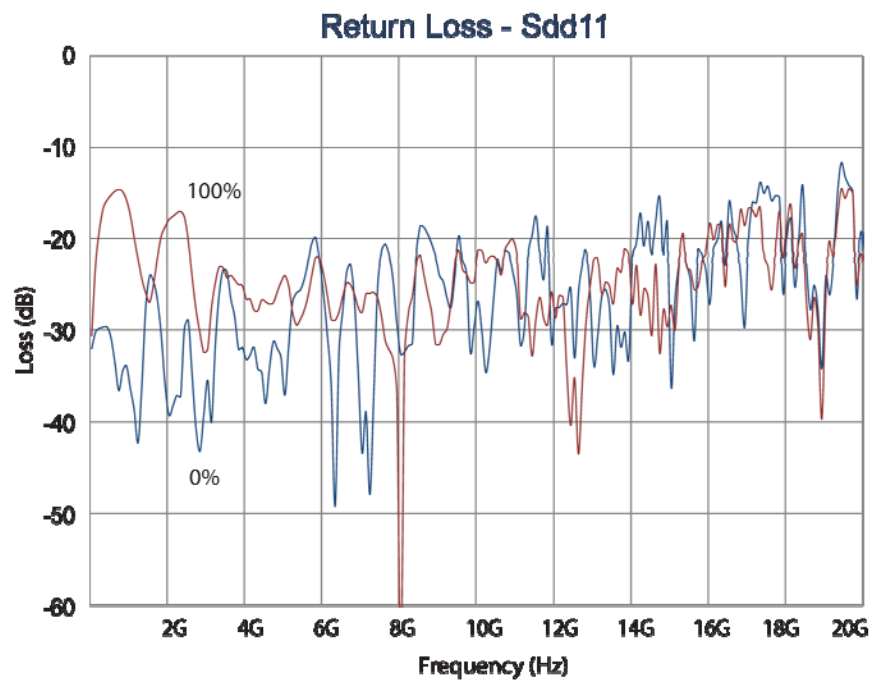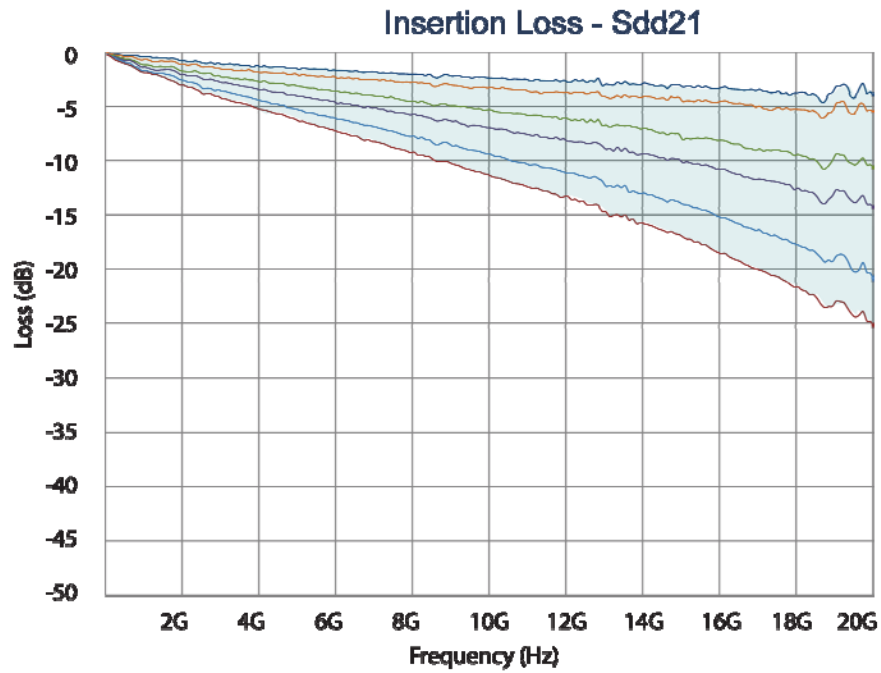

5. Warranties

- This product is warranted from date of purchase against defects of materials or in workmanship for a period of 1 year.
- This warranty is extended only to the original purchase. A purchase receipt or other proof of date of original purchase will be required in order to exercise your rights under this warranty.
- If the product fails to function properly, return the product, prepaid and this warranty only covers failures due to defects in materials or workshop which occur during normal use.
- It does not cover damage which occurs in shipment; applications and used for which this product was not intended; failures or problems which are caused by products or equipment not supplied by ARTEK; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning, or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; improper connection with any peripheral; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating instructions, customer adjustments, maintenance and environment instructions that are covered and prescribed in the instruction book.
- 2.92mm(K) connector adapters are excluded with this warranty.

Cautions

- Terminate the other line even when you use one line of the differential signal.
- Avoid all possible shocks and vibrations.
- It may take approximately one second until it becomes stable once you change the setting parameters.
- Retain the power voltage within the acceptance range for precise jitter generation.

Customer Support

Please contact with our customer support center.

Worldwide Sales & Support



Developed By

